











Axle of Cover 19 and Cover 20



Use the Axle to connecting inside the rod of cover 19 and 20.